

WiPickle User Manual

Operation

1. **Arm the WiPickle:** Press and hold the HIGH switch. The lights will start alternating slowly. When both lights are glowing steadily, release the switch. The **WiPickle** is armed and ready to release targets.
2. **Release targets:** Press and release any of the switches for the desired target(s). Note that light(s) corresponding with the switch will glow.
3. **Disarm the WiPickle:** Any time you need to disable the system, **WiPickle** can be disarmed. Press and hold the HIGH switch. A High house Target will be released. Keep pressing the switch until the Lights will start alternating slowly. When both lights are off steadily, release the switch. The **WiPickle** is disarmed and will not release targets.

Changing the Release mode

Before attempting any Setup changes, you must disarm the **WiPickle** (see section 3)

4. Random Delay:

- 4.1. Simultaneously press and hold the **DOUBLES** and **LOW** switches.
- 4.2. Both light will flash quickly. When the **LOW** light glows steadily, release the switches.
- 4.3. Arm the **WiPickle** (see section 1). All targets will be released after a random delay between 0 and 3 seconds. During the delay, the light(s) associated with the switch will glow.

5. Solo Delay:

Warning: To prevent serious injury, you must disarm the WiPickle before handling trap machines or standing in front of the Low House window

- 5.1. Simultaneously press and hold the **DOUBLES** and **HIGH** switches.

- 5.2. Both light will flash quickly. When the **HIGH** light glows steadily, release the switches.

- 5.3. Arm the **WiPickle** (see section 1). All targets will be released after a fixed delay of 3 seconds. During the delay, the light(s) associated with the switch will glow.

6. Immediate release:

- 6.1. Simultaneously press and hold the **LOW** and **HIGH** switches.
- 6.2. Both light will flash quickly. When both lights glows steadily, release the switches.
- 6.3. Arm the **WiPickle** (see section 1). All targets will be released immediately.

Low Battery

If after pressing any of the switches, the light(s) corresponding with that switch blink 8 times, then its time to replace the battery.

